


LA GARD BASIC SERIES


3802 Firmware

Dual-Handed Swing Bolt Lock or Dead Bolt

MANAGER INSTRUCTIONS

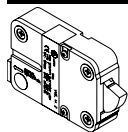

Dual-handed
Swing Bolt Lock

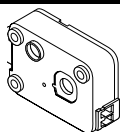

Dead Bolt
Lock



3000 Entry
(Swing Bolt
Only)



3710 Entry
(Swing Bolt
Only)

 
SUGGESTED KEYPADS:




3715 Entry
(Swing Bolt
Only)



3035
Entry



3750
Entry

 

3190 Privat![!]
(Optional)

LOCK USERS

Manager

- Open Lock
- Change Combination
- Enable/Disable User
- Delete User

Users

- Open Lock
- Change Combination

STANDARD LOCK FEATURES

Wrong Try Penalty

- Entry of four (4) consecutive invalid combinations initiates a five (5) minute delay penalty. Lock responses during the penalty period are as follows:
 - The LED will flash every ten (10) seconds.
 - If any key is pressed, the Lock will flash the LED and beep three times.
- Once the penalty period has ended, two (2) consecutive invalid combinations will initiate another five (5) minute penalty period.

Low Battery Warning

- Repeated audio/visual signals (LED flashes/beeps) during Lock opening indicate the battery is low and should be replaced immediately.
- If the battery level becomes too low to safely operate the Lock, pressing any key will initiate the low battery warning. The battery must be replaced before the Lock will operate.

LOCK OPERATING CONVENTIONS

- If a mistake is made while entering keystrokes, wait thirty (30) seconds and repeat operation.
- To access lock commands, enter combination and hold down the last digit until Lock double signals and the LED stays on.

LOCK RESPONSES

Standard Operations

- Manager Menu – LED on during operation
- Double signal - two (2) LED flashes and two (2) beeps indicate entry is valid or accepted.
- Triple signal - three (3) LED flashes and three (3) beeps indicate invalid or not accepted.
- Lock must be opened within 4 seconds once a valid combination has been entered.
- To open a container with a Swing Bolt Lock, turn the container handle to the open position and open the door.
- To open a container with a Dead or Spring Bolt Lock, turn the keypad or dial to retract the bolt and open the door.
- When closing a container, verify that it has been secured.

LOCK OPERATIONS

CHANGE COMBINATION Manager and User

NOTE: *Each combination must be changed independently at the Lock. New combination will not be accepted if it varies from the current combination by only one digit (+/-). When selecting a combination, do not use a birthday or other predictable information that could give correlation between the user and the combination.*

CAUTION: *Always perform this operation with the door open, and test the opening of the Lock with the new combination several times before closing the door.*

1. Enter zero [0] six times.
Ex. (0-0-0-0-0-0)
 2. Enter an existing combination.
Ex. (1-2-3-4-5-6)
 3. Enter the NEW combination.
Ex. (6-5-4-3-2-1)
 4. Re-enter the NEW combination to confirm
Ex. (6-5-4-3-2-1)
- The NEW combination is now active.
5. Test lock operation several times before closing the door.

MANAGER COMMANDS

COMMAND 1

Activate User

1. Enter Manager combination and **hold down last digit of combination until Lock double signals and the LED stays on.**
2. **PRESS 1.**
3. Enter the NEW User combination.
4. Re-enter the NEW User combination to confirm. User combination is now active.

Reinstate User

1. Enter Manager combination and **hold down last digit of combination until Lock double signals and the LED stays on.**
2. **PRESS 1.**
3. Enter User number (1- 9). User is reinstated.

COMMAND 2

Disable User

1. Enter Manager combination and **hold down last digit of combination until Lock double signals and the LED stays on.**
2. **PRESS 2.** User is temporarily disabled. The User combination is saved and will be valid once reinstated.

COMMAND 3

Delete User

1. Enter Manager combination and **hold down last digit of combination until Lock double signals and the LED stays on.**
2. **PRESS 3.** User is deleted.

BATTERY MAINTENANCE & REPLACEMENT

- It is recommended that batteries be replaced at least once a year.
- The use of a high quality, name brand alkaline battery (Energizer® or Duracell®) is recommended.
- If the battery is depleted, follow the battery changing instructions for the Entry Device you are using. Battery changing instructions can be found in either the **Electronic Entry Device Installation Instructions** (762.128) or in the respective Entry Device User Instructions for the Entry in operation.

The latest versions of LA GARD documentation are available for download at www.kaba-mas.com.